

92900 to 92999

Illustrated Parts List

MODEL SERIES

92900 to 92999

TYPE NUMBERS

0010 to 0061

0110 to 0447

0510 to 1292

TO FIND

**THE CORRECT NUMBER OF THE PART YOU NEED:
FOLLOW THE INSTRUCTIONS BELOW.**



- A. Refer to Engine Model, Type and Code Number (formerly Serial Number) that is stamped on the blower housing or name plate of engine. (Engine type numbers such as 400108 are listed complete. Engine type numbers such as 0147 01 are listed herein only as 0147. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification). Then use the Illustrated Parts List covering these Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Numbers are listed. **THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE".**
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type Number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.



[illegible]


2

92900 to 92999

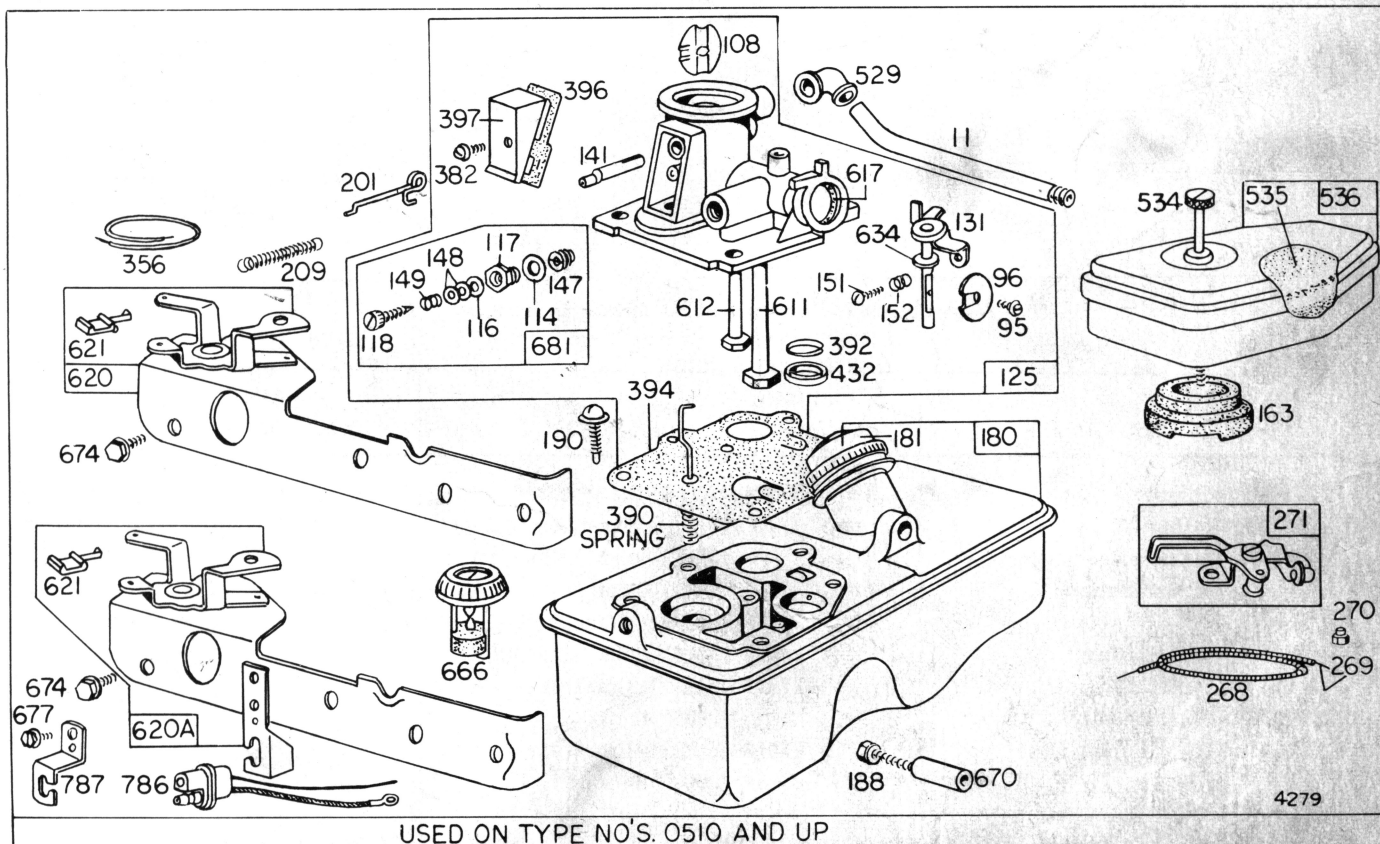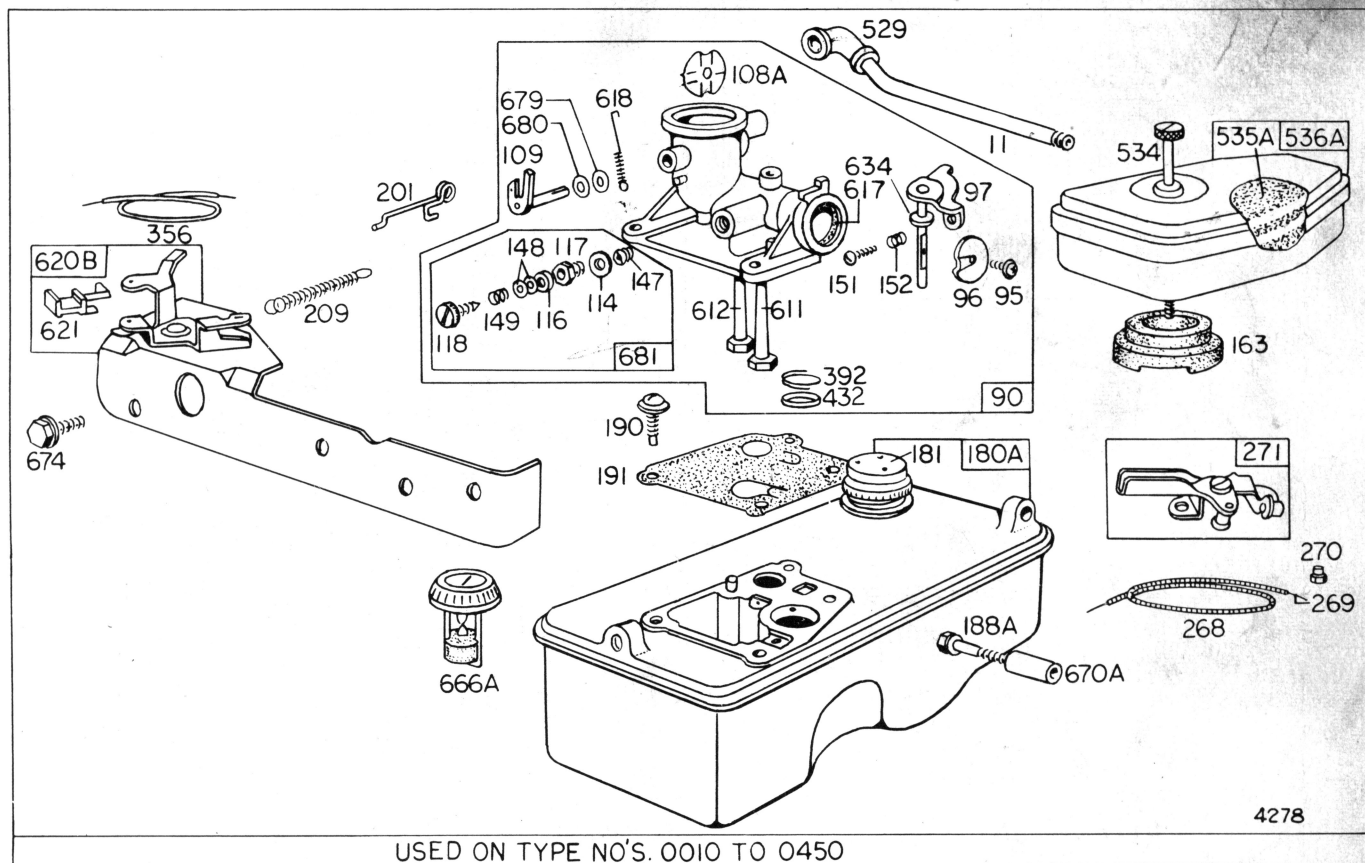

Assemblies include all parts shown in frames.

92900 to 92999

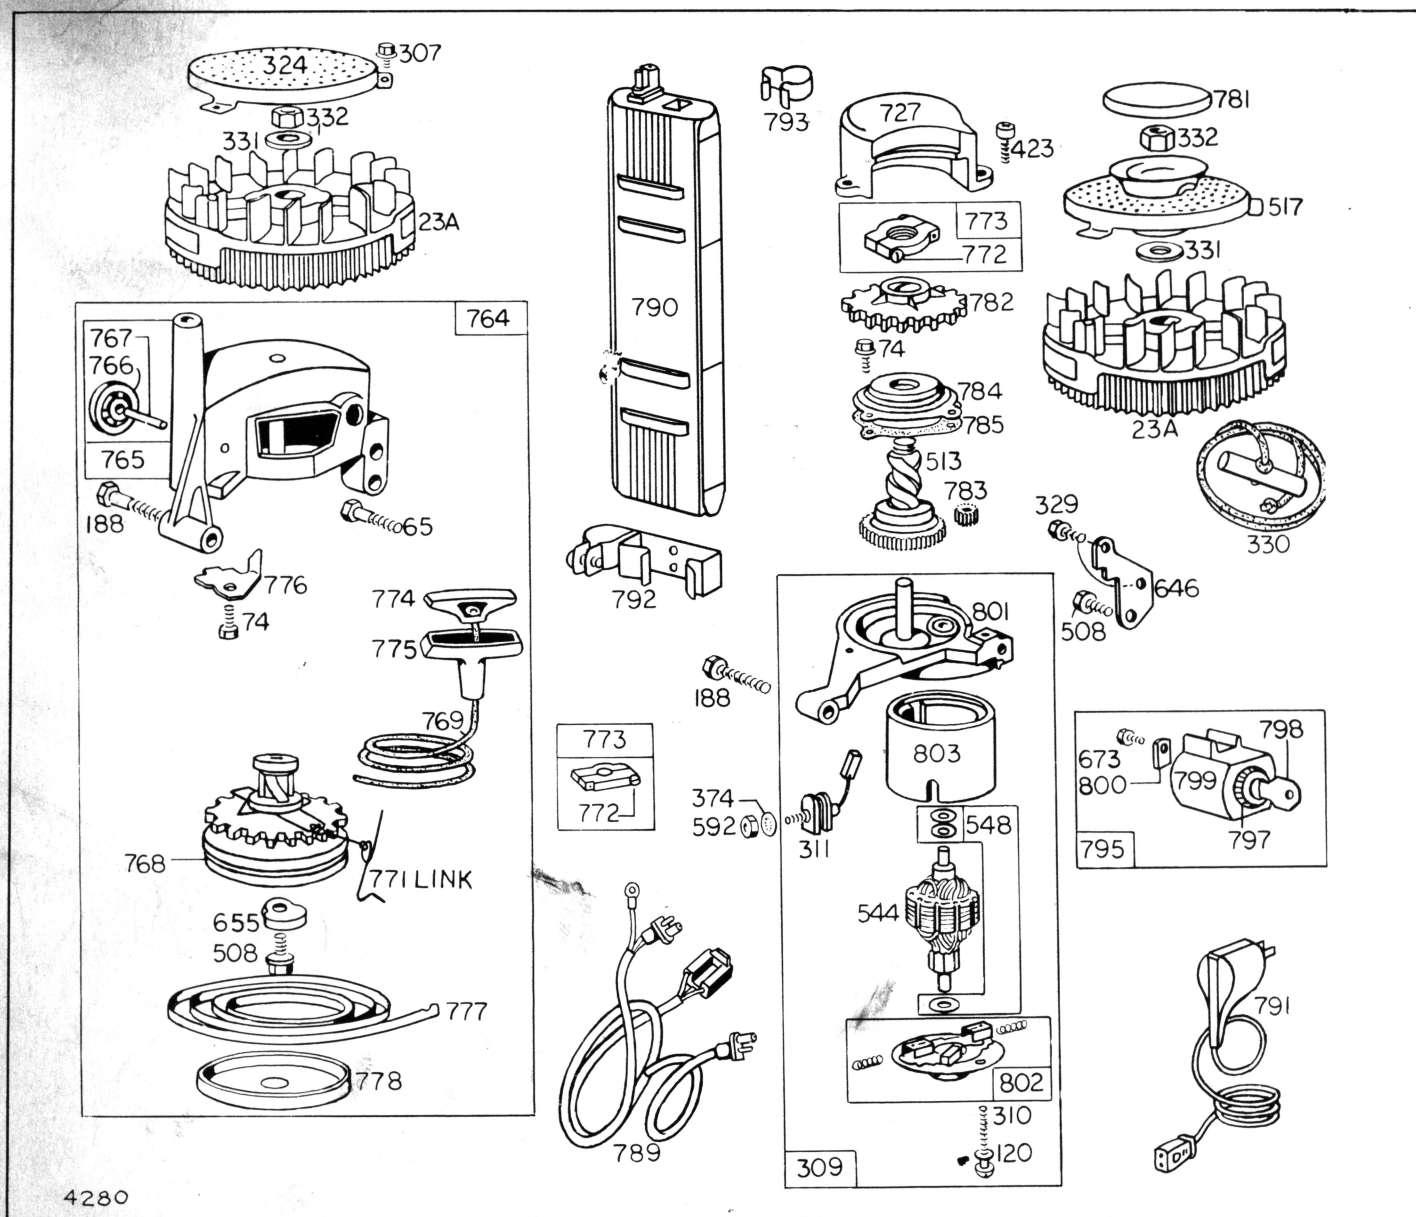

Assemblies include all parts shown in frames.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	298988	Cylinder Assembly	10	93394	Screw—Breather and P. T. O. Gear Sump Cover (Ref. No. 86) Mtg. Sem	13	93111	Screw—Cylinder Head (1-15/16" long)
2	293708	Bushing—Cylinder	11	230802	Tube—Breather	15	91084	Plug—Oil Drain
	Note:	Requires special tools for installation.	12	†*27586	Gasket—Crankcase—.015" thick (Standard)		Note:	93418 Plug—Oil Drain (Socket Head)
3	†89660	Seal—Oil		*27617	Gasket—Crankcase—.005" thick			Used on type Nos. 0015, 0016, 0017, 0018, 0019, 0020, 0021, 0022, 0023, 0024, 0028, 0029, 0030, 0031, 0032, 0033, 0034,
5	211479	Head—Cylinder		†*27618	Gasket—Crankcase—.009" thick			
7	†270341	Gasket—Cylinder Head						
8	298383	Breather—Valve Chamber						
9	†*270239	Gasket—Valve Cover						

* Included in Gasket Set—Part No. 298989.

† Included in Engine Repair Kit—Part No. 390132.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		0040, 0041, 0042, 0043, 0044, 0050, 0060, 0158, 0160, 0170, 0174, 0182, 0185, 0198, 0199, 0200, 0205, 0206, 0207, 0208, 0213, 0217, 0222, 0229, 0236, 0242, 0244, 0246, 0249, 0281, 0302, 0311, 0322, 0330, 0337, 0354, 0359, 0370, 0391, 0393, 0400, 0416, 0430, 0431, 0528, 0575, 0670, 0677, 0691, 0704, 0705, 0706, 0717, 0718, 0738, 0739, 0740, 0756, 0780, 0783, 0784, 0785, 0786, 0792, 0793, 0794, 0795, 0805, 0816, 0831, 0837, 0851, 0878, 0894, 0916, 0920, 0922, 0973, 1033, 1034, 1042, 1074, 1075, 1078, 1097, 1115, 1143, 1210, 1211, 1216, 1232, 1244, 1246, 1254, 1257, 1264, 1289.			0915, 0917, 0933, 0948, 0951, 0953, 0955, 0963, 0964, 0965, 0969, 0981, 0983, 0989, 0995, 0999, 1006, 1018, 1025, 1033, 1049, 1055, 1072, 1073, 1074, 1076, 1087, 1090, 1116, 1125, 1138, 1147, 1173, 1178, 1182, 1212, 1245, 1257, 1268, 1288. 260097 Crankshaft Used on type Nos. 0023, 0117, 0122, 0147, 0152, 0186, 0197, 0216, 0287, 0292, 0338, 0381, 0386, 0389, 0419, 0435, 0523, 0603, 0615, 0704, 0715, 0725, 0773, 0847, 0877, 0918, 0928, 1085, 1097, 1119, 1120, 1144, 1163, 1187, 1203, 1238, 1255, 1256, 1267, 1271, 1274, 1286. 260098 Crankshaft Used on type Nos. 0019, 0020, 0118, 0123, 0132, 0141, 0170, 0178, 0182, 0185, 0192, 0193, 0206, 0217, 0224, 0229, 0245, 0246, 0249, 0263, 0271, 0273, 0286, 0289, 0290, 0302, 0309, 0324, 0334, 0340, 0360, 0368, 0369, 0372, 0383, 0390, 0391, 0395, 0396, 0398, 0409, 0424, 0519, 0604, 0616, 0674, 0683, 0686, 0693, 0700, 0718, 0731, 0732, 0738, 0754, 0770, 0774, 0775, 0780, 0783, 0795, 0819, 0845, 0875, 0894, 0929, 0939, 0967, 0971, 0974, 0975, 0984, 0986, 0988, 0992, 0997, 1002, 1016, 1017, 1041, 1082, 1088, 1101, 1115, 1171, 1186, 1199, 1209, 1220, 1225, 1226, 1229, 1253, 1258, 1276, 1287.			260099 Crankshaft Uses: 220708 Shim— Crankshaft, Thrust Used on type Nos. 0040, 0041, 0042, 0125, 0126, 0201, 0226, 0232, 0241, 0253, 0256, 0270, 0277, 0278, 0288, 0297, 0315, 0335, 0336, 0362, 0363, 0394, 0412, 0413, 0540, 0542, 0641, 0647, 0662, 0665, 0729, 0730, 0788, 0789, 0817, 0823, 0869, 0883, 0887, 0889, 0991, 1005, 1028, 1070, 1091, 1092, 1117, 1206. 260204 Crankshaft Used on type Nos. 0155, 0962. 260224 Crankshaft Uses: 220708 Shim— Crankshaft, Thrust Used on type Nos. 0043, 0044, 0153, 0154, 0162, 0164, 0169, 0180, 0183, 0190, 0252, 0266, 0267, 0312, 0331, 0332, 0341, 0364, 0543, 0544, 0642, 0648, 0714, 0752, 0762, 0763, 0859, 0905, 0914, 0930, 0931, 0932, 0937, 1026, 1145, 1175, 1177, 1227, 1277. 260235 Crankshaft Used on type Nos. 0137, 0213, 0301, 0357, 0973, 1042, 1078, 1207, 1263, 1285. 260319 Crankshaft Used on type Nos. 0173, 0295, 0689, 0707. 260370 Crankshaft Used on type Nos. 0029, 0342, 0366, 0529, 0792, 1216. 260400 Crankshaft Used on type Nos. 0033, 0526, 0533.
16	260124	Crankshaft Note: 260096 Crankshaft Used on type Nos. 0017, 0018, 0031, 0121, 0136, 0143, 0151, 0157, 0203, 0204, 0210, 0215, 0218, 0225, 0248, 0261, 0265, 0275, 0276, 0279, 0280, 0285, 0293, 0294, 0299, 0304, 0307, 0308, 0314, 0327, 0328, 0330, 0337, 0349, 0350, 0352, 0353, 0354, 0359, 0367, 0371, 0382, 0388, 0393, 0401, 0405, 0421, 0423, 0425, 0428, 0430, 0433, 0440, 0444, 0517, 0602, 0614, 0671, 0678, 0688, 0727, 0728, 0741, 0755, 0757, 0760, 0761, 0766, 0771, 0786, 0787, 0797, 0805, 0816, 0821, 0822, 0843, 0844, 0856, 0857, 0858, 0863, 0866, 0867, 0886, 0893, 0901, 0913,						

92900 to 92999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	260402	Crankshaft Uses: 220708 Shim— Crankshaft, Thrust Used on type Nos. 0138, 0300.		0130, 0179, 0209, 0313, 0385, 0399, 0415, 0417, 0550, 0624, 0636, 0675, 0717, 0885, 0940, 1009, 1029, 1030, 1105, 1118, 1150, 1196.		261013	Crankshaft Used on type Nos. 0573, 0611, 0619, 0719, 0726, 0765, 0830, 0848, 0888, 0900, 1063, 1066, 1086, 1112, 1121, 1139, 1185, 1252, 1264, 1266, 1289.	
	260411	Crankshaft Used on type Nos. 0028, 0200, 0528, 0739.		260915 Crankshaft Used on type Nos. 0176, 0177, 0228, 0233.		261014	Crankshaft Used on type Nos. 0574, 0612, 0620, 0699, 0722, 0751, 0776, 0790, 0791, 0828, 0833, 0840, 0846, 0890, 0934, 0935, 0936, 0941, 0947, 0998, 1000, 1003, 1004, 1012, 1036, 1037, 1053, 1059, 1080, 1083, 1135, 1136, 1154, 1155, 1164, 1165, 1190, 1204, 1218, 1265, 1281, 1283.	
	260670	Crankshaft Used on type Nos. 0021, 0022, 0032, 0172, 0175, 0230, 0259, 0260, 0521, 0532.		260957 Crankshaft Used on type Nos. 0024, 0034, 0318, 0319, 0320, 0321, 0322, 0323, 0326, 0346, 0347, 0524, 0534, 0673, 0676, 0677, 0872, 0873, 0879, 1050, 1122, 1142, 1170, 1188, 1189, 1230, 1259.		261021	Crankshaft Used on type Nos. 0565, 0629, 0637, 0659, 0661, 0698, 0701, 0734, 0759, 0810, 0835, 0862, 0874, 0896, 0924, 0925, 0927, 0960, 0993, 0994, 1010, 1011, 1015, 1022, 1023, 1047, 1048, 1067, 1068, 1089, 1095, 1098, 1131, 1132, 1159, 1160, 1197, 1198, 1202, 1236, 1237, 1239, 1248, 1269, 1270.	
	260856	Crankshaft Uses: 220708 Shim— Crankshaft, Thrust Used on type Nos. 0146, 0227, 0258, 0283, 0379, 0422.		261006 Crankshaft Uses: 220708 Shim— Crankshaft, Thrust Used on type Nos. 0645, 0649, 0664, 0666, 0800, 0854, 0870, 1027, 1077, 1093, 1152.		261022	Crankshaft Used on type Nos. 0630, 0638, 0742, 1060, 1109, 1110, 1127, 1128, 1133, 1153, 1172.	
	260911	Crankshaft Used on type Nos. 0060, 0127, 0131, 0188, 0214, 0240, 0243, 0251, 0274, 0282, 0291, 0316, 0317, 0356, 0361, 0375, 0380, 0384, 0403, 0410, 0414, 0420, 0427, 0429, 0434, 0438, 0560, 0621, 0633, 0657, 0660, 0668, 0695, 0697, 0713, 0802, 0807, 0809, 0842, 0897, 0899, 0903, 0911, 0943, 0954, 0976, 0978, 0982, 1001, 1021, 1046, 1079, 1096, 1102, 1180, 1201, 1231, 1233, 1234, 1235, 1273, 1282.		261007 Crankshaft Uses: 220708 Shim— Crankshaft, Thrust Used on type Nos. 0646, 0650, 0723, 0724, 0838, 0841, 0849, 0880, 1014, 1228.		261023	Crankshaft Used on type Nos. 0631, 0639, 0748, 0808, 1111, 1157, 1158, 1200.	
	260912	Crankshaft Used on type Nos. 0128, 0150, 0333, 0344, 0345, 0404, 0418, 0439, 0622, 0634, 0696, 0758, 0772, 0979, 1051, 1176.		261012 Crankshaft Used on type Nos. 0572, 0610, 0618, 0672, 0720, 0733, 0735, 0777, 0820, 0827, 0829, 0832, 0837, 0850, 0864, 0868, 0882, 0884, 0904, 0909, 0910, 0942, 0944, 0961, 0966, 0968, 0990, 0996, 1019, 1034, 1040, 1064, 1069, 1075, 1100, 1104, 1107, 1124, 1126, 1146, 1151, 1156, 1161, 1167, 1174, 1179, 1194, 1213, 1232, 1242, 1249, 1278.		261024	Crankshaft Used on type Nos. 0632, 0640, 0721, 0958, 0959, 1031, 1032, 1038, 1039, 1071, 1134, 1168, 1169, 1191, 1192, 1214, 1243, 1250, 1275.	
	260913	Crankshaft Used on type Nos. 0129, 0623, 0635, 1251, 1284.						
	260914	Crankshaft Used on type Nos. 0050,						

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	261028	Crankshaft Uses: 220708 Shim— Crankshaft, Thrust Used on type Nos. 0736, 0737, 0779, 0839, 1007, 1008.		294231	Sump—Oil Used on type Nos. 0040, 0041, 0044, 0540, 0544.			0936, 0939, 0941, 0942, 0944, 0946, 0947, 0952, 0956, 0961, 0966, 0977, 0984, 0990, 0996, 0998, 1000, 1002, 1003, 1004, 1012, 1013, 1019, 1034, 1035, 1036, 1037, 1040, 1044, 1045, 1053, 1059, 1063, 1064, 1066, 1069, 1075, 1080, 1081, 1083, 1084, 1086, 1094, 1100, 1104, 1112, 1121, 1124, 1126, 1135, 1136, 1139, 1146, 1151, 1154, 1155, 1156, 1161, 1162, 1164, 1165, 1167, 1174, 1178, 1179, 1184, 1185, 1186, 1190, 1193, 1194, 1195, 1204, 1213, 1218, 1232, 1238, 1242, 1249, 1252, 1258, 1264, 1265, 1266, 1278, 1280, 1281, 1283, 1289.
	261029	Crankshaft Used on type Nos. 0684, 0798.		295041	Sump—Oil Used on type Nos. 0139, 0246, 0247, 0339, 0376, 0391, 0795, 0806, 0968, 1107.			
	261030	Crankshaft Used on type Nos. 0571, 0609, 0617, 0654, 0656, 0681, 0694, 0703, 0706, 0710, 0712, 0749, 0750, 0753, 0796, 0799, 0804, 0815, 0831, 0834, 0836, 0852, 0853, 0861, 0881, 0892, 0895, 0898, 0906, 0907, 0908, 0921, 0926, 0946, 0952, 0956, 0977, 0985, 1013, 1035, 1044, 1045, 1081, 1084, 1094, 1123, 1137, 1141, 1162, 1193, 1195, 1260, 1280.		298280	Sump—Oil Used on Model 92990 to 92999 Series.			
	261032	Crankshaft Used on type Nos. 0743, 0744, 0876.		298359	Sump—Oil Used on type Nos. 0180, 0232, 0736, 0737.			
	261033	Crankshaft Used on type No. 0745.		298727	Sump—Oil Used on type No. 0270.			
	261050	Crankshaft Used on type Nos. 0575, 0793, 0794, 1129, 1143, 1210, 1211, 1223.		390017	Sump—Oil Used on type Nos. 0645, 0646, 0649, 0650, 0664, 0666, 0723, 0724, 0729, 0730, 0746, 0747, 0779, 0800, 0812, 0838, 0839, 0841, 0849, 0854, 0870, 0880, 1007, 1008, 1014, 1027, 1077, 1093, 1152, 1177, 1228.		18A 299058	Sump—Oil Used on Model 92980 to 92989 Series.
	261051	Crankshaft Uses: 220708 Shim— Crankshaft, Thrust Used on type Nos. 0746, 0747, 0812.		390068	Sump—Oil Used on type Nos. 0571, 0572, 0573, 0574, 0609, 0610, 0611, 0612, 0617, 0618, 0619, 0620, 0654, 0656, 0672, 0681, 0684, 0694, 0699, 0703, 0706, 0710, 0712, 0719, 0720, 0722, 0726, 0727, 0728, 0733, 0735, 0743, 0744, 0745, 0749, 0750, 0751, 0753, 0765, 0776, 0777, 0790, 0791, 0796, 0798, 0804, 0815, 0820, 0827, 0828, 0829, 0830, 0831, 0832, 0833, 0834, 0836, 0837, 0840, 0846, 0848, 0850, 0852, 0853, 0861, 0863, 0864, 0868, 0876, 0881, 0882, 0884, 0888, 0890, 0892, 0895, 0898, 0900, 0904, 0906, 0907, 0908, 0909, 0910, 0921, 0923, 0926, 0934, 0935,		Note:	390015 Sump—Oil Used on type Nos. 0565, 0629, 0630, 0631, 0632, 0637, 0638, 0639, 0640, 0659, 0661, 0698, 0701, 0721, 0734, 0742, 0748, 0759, 0799, 0808, 0810, 0835, 0862, 0874, 0896, 0924, 0925, 0927, 0940, 0958, 0959, 0960, 0985, 1010, 1011, 1015, 1022, 1023, 1029, 1030, 1031, 1038, 1039, 1047, 1048, 1060, 1067, 1068, 1071, 1089, 1095, 1098, 1109, 1110, 1111, 1123, 1127, 1128,
18	293512	Sump—Oil Note: 293597 Sump—Oil Used on type Nos. 0217, 0229, 0263, 0265, 0295, 0302, 0689, 0770, 0771, 0894.						

92900 to 92999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		1131, 1132, 1133, 1134, 1137, 1141, 1157, 1158, 1159, 1160, 1168, 1169, 1172, 1188, 1189, 1191, 1192, 1197, 1200, 1202, 1214, 1236, 1237, 1239, 1243, 1248, 1250, 1251, 1259, 1260, 1269, 1270, 1275.			0237, 0240, 0246, 0248, 0253, 0256, 0257, 0261, 0262, 0263, 0264, 0265, 0273, 0282, 0286, 0295, 0296, 0302, 0303, 0311, 0316, 0317, 0322, 0325, 0329, 0330, 0334, 0348, 0354, 0356, 0357, 0358, 0364, 0368, 0370, 0372, 0374, 0376, 0379, 0381, 0382, 0383, 0385, 0388, 0391, 0394, 0397, 0400, 0403, 0405, 0409, 0419, 0422, 0425, 0426, 0429, 0435, 0515, 0519, 0523, 0550, 0560, 0670, 0677, 0678, 0682, 0683, 0687, 0689, 0704, 0707, 0715, 0716, 0717, 0718, 0732, 0760, 0769, 0770, 0771, 0780, 0782, 0783, 0785, 0786, 0795, 0803, 0805, 0806, 0807, 0817, 0819, 0826, 0844, 0855, 0857, 0877, 0891, 0893, 0894, 0901, 0905, 0915, 0919, 0920, 0922, 0928, 0929, 0950, 0953, 0957, 0967, 0971, 0973, 0974, 0980, 0983, 0988, 0992, 1025, 1049, 1055, 1061, 1072, 1115, 1118, 1138, 1140, 1149, 1175, 1182, 1183, 1196, 1207, 1209, 1215, 1217, 1220, 1221, 1263, 1276, 1277, 1285, 1287, 1291.			26 298982 Ring Set—Standard Piston Consists of: 211467 Ring, Piston, Comp., Top, Standard 211468 Ring, Piston, Comp., Center, Standard 211469 Ring, Piston, Oil, Standard 298983 Ring Set—.010" O.S. Piston Consists of: 211504 Ring, Piston, Comp., Top, .010" O.S. 211503 Ring, Piston, Comp., Center, .010" O.S. 211505 Ring, Piston, Oil, .010" O.S. 298984 Ring Set—.020" O.S. Piston Consists of: 211507 Ring, Piston, Top, .020" O.S. 211506 Ring, Piston, Comp., Center, .020" O.S. 211508 Ring, Piston, Oil, .020" O.S. 298985 Ring Set—.030" O.S. Piston Consists of: 211511 Ring, Piston, Comp., Top, .030" O.S. 211510 Ring, Piston, Comp., Center, .030" O.S. 211512 Ring, Piston, Oil, .030" O.S.
20 †291841		Seal—Oil						
	Note:	294167 Seal—Oil (Crankshaft—P. T. O. Side) 298041 Seal—Oil (1/2" Auxiliary Drive Shaft) Used on Model 92990 to 92999 Series. 294160 Seal—Oil (3/4" Auxiliary Drive Shaft) Used on Model 92992 Series type Nos. 0040, 0041, 0044, 0540, 0544. 294167 Seal—Oil (Crankshaft—P. T. O. Side) Used on type No. 0270.						
21 66768		Plug—Oil Filler						
22 93032		Screw—Sump Mtg. Sem						
22A 93415		Screw—Sump Mtg. Sem (One used in Auxiliary Drive Gear Sump) on Model 92980 to 92999 Series. Note: Use 93032 Screw in the other (5) Sump Mounting Holes.	23A 299982		Flywheel—Magneto	27 26026		Lock—Piston Pin
23 297949		Flywheel—Magneto	24 †61760		Key—Flywheel	28 298909		Pin Assembly—Piston— Standard
	Note:	296884 Flywheel— Magneto Used on type Nos. 0015, 0019, 0020, 0023, 0050, 0060, 0133, 0134, 0141, 0146, 0149, 0152, 0161, 0173, 0178, 0179, 0180, 0181, 0182, 0185, 0191, 0201, 0204, 0205, 0206, 0208, 0212, 0217, 0229, 0236,	25 298904		Piston Assy.—Standard	298908		Pin Assembly—Piston— .005" O.S.
			298905		Piston Assy.—.010" O.S.	29 294201		Rod Assy.—Connecting
			298906		Piston Assy.—.020" O.S.	Note:		For Connecting Rod with .020" undersize Crank- pin Bore — order No. 296079.
			298907		Piston Assy.—.030" O.S.	31 220756		Lock—Conn. Rod Screw
						32 92296		Screw—Connecting Rod
					MODEL 92900 SERIES PISTON			
					RING SETS:			
					Note: For Chrome Piston Ring Set — standard size — order Part No. 299742.			

† Included in Engine Repair Kit—Part No. 390132.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
33	296676	Valve—Exhaust			0380, 0384, 0399,			0958, 0959, 0976, 0978,
	Note: 26973	Valve—Exhaust			0414, 0415, 0417,			0982, 0993, 0994, 1009,
		Used on type Nos. 0139,			0439, 0565, 0668,			1010, 1011, 1021, 1022,
		0227, 0258, 0282, 0283,			0675, 0701, 0721, 0772,			1023, 1038, 1039, 1046,
		0331, 0339, 0445, 0690,			0802, 0809, 0810, 0862,			1047, 1048, 1071, 1102,
		0779, 0839, 0892, 0893,			0885, 0954, 0958, 0959,			1109, 1110, 1118, 1122,
		0898, 0919, 1007, 1008,			0976, 0978, 0982, 0993,			1123, 1127, 1128, 1150,
		1194.			0994, 1009, 1010, 1011,			1153, 1176, 1191, 1192,
34	296677	Valve—Intake			1021, 1022, 1023, 1038,			1196, 1197, 1198, 1231,
35	260552	Spring—Intake Valve			1039, 1046, 1047, 1048,			1233, 1234, 1235, 1236,
36	26478	Spring—Exhaust Valve			1071, 1102, 1109, 1110,			1237, 1239, 1243, 1270,
	Note: 26826	Spring—Exhaust			1118, 1122, 1123, 1127,			1273.
		Valve			1128, 1150, 1153, 1176,	70	298436	Ratchet—Rewind and
		Used on type Nos. 0139,			1191, 1192, 1196, 1197,			Wind-up Starter
		0227, 0258, 0282, 0283,			1198, 1231, 1233, 1234,	71	221653	Washer—Clutch Retainer
		0331, 0339, 0445, 0690,			1235, 1236, 1237, 1239,	73	221661	Screen—Rewind and
		0779, 0839, 0892, 0893,			1243, 1273.			Wind-up Starter
		0898, 0919, 1007, 1008,	47	294652	Oil Slinger Gear and	74	93490	Screw—Sem
		1194.			Bracket	75	220865	Washer—Spring
40	93312	Retainer—Valve Spring		Note: 294718	Oil Slinger Gear	76	68238	Washer—Ratchet Sealing
		Used with valves with			and Bracket	83	230831	Shaft—Drive
		groove in stem.			Used on type Nos. 0040,		Note: 230860	Shaft—Drive
	Note: 292259	Rotocap—Exhaust			0041, 0044, 0540, 0544.			Used on type Nos. 0050,
		Valve	52	270345	Gasket—Intake Elbow			0179, 0384, 0385, 0403,
	230126	Pin—Exhaust	54	93485	Screw—Intake Elbow Mtg.			0550, 0701, 0717, 0748,
		Valve Rotocap Retainer	56	298738	Pulley—Rewind Starter			0808, 0862, 1111, 1200,
	230127	Retainer—Exhaust	57	294303	Spring—Rewind Starter			1243, 1251, 1284.
		Valve Rotocap	58	66694	Rope—Rewind Starter—			230870 Shaft—Drive
		Used on type Nos. 0139,			47-1/8" long			Used on type Nos. 0177,
		0227, 0258, 0282, 0283,		Note:	If longer rope is needed,			0228, 0233, 0320, 0321,
		0331, 0339, 0445, 0690,			Order No. 66684 and cut			0326, 0375, 0410, 0676,
		0779, 0839, 0892, 0893,			to required length.			0799, 0802, 0879, 0899,
		0898, 0919, 1007, 1008,	59	230228	Pin—Starter Rope			0903, 0943, 0960, 0985,
		1194.	60	66728	Grip—Starter Rope			1067, 1068, 1089, 1127,
45	230173	Tappet—Valve	61	†68618	Bumper—Starter Pulley			1128, 1153, 1176, 1250,
46	210453	Gear—Cam	65	93587	Screw—Vertical Pull			1275.
	Note: 210804	Gear—Cam			Starter Mounting			230921 Shaft—Drive
		Used on type Nos. 0040,	66	298310	Clutch Assy.—Rewind			Used on type Nos. 0313,
		0041, 0044, 0540, 0544.			and Wind-up Starter			0344, 0345, 0399, 0976,
	211337	Gear—Cam	67	211383	Housing—Starter Clutch			1102, 1109, 1110, 1131,
		Used only on Model 92990	68	63770	Ball—Clutch			1132, 1159, 1160, 1197,
		to 92999 Series, except	69	66718	Washer—Thrust			1198, 1231, 1233, 1234,
		type Nos. 0040, 0041,		Note: 68938	Washer—Thrust			1239, 1269.
		0044, 0540, 0544, which			Used on type Nos. 0313,			230948 Shaft—Drive
		use Part 210804.			0380, 0384, 0399,			Used on type Nos. 0380,
46A	298803	Cam Gear, Worm and Oil			0414, 0415, 0417,			0414, 0565, 0802, 0809,
		Slinger Assy.			0439, 0565, 0668,			0810, 0835, 1010, 1011,
	Note: 299563	Cam Gear, Worm			0675, 0701, 0721, 0772,			1060, 1202, 1235, 1236,
		and Oil Slinger Assy.			0802, 0809, 0810, 0835,			1237.
		Used on type Nos. 0313,			0862, 0885, 0940, 0954,			

† Included in Engine Repair Kit—
Part No. 390132.

92900 to 92999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		230952 Shaft—Drive Used on type Nos. 0404, 0415, 0417, 0418, 0420, 0429, 0434, 0675, 0721, 0742, 0807, 0842, 0885, 0897, 0925, 0940, 0958, 0959, 1001, 1009, 1038, 1039, 1051, 1071, 1079, 1105, 1122, 1123, 1150, 1157, 1158, 1172, 1191, 1192, 1214, 1273.	108	280024	Valve—Choke Note: All Model 92905, 92985, 92995 Series engines use Part No. 298819 Choke Valve; also used on type Nos. 0575, 0792, 0794, 1210, 1211, 1216, 1236.	201	†260878	Link—Governor Note: 261027 Link—Governor Used only on Model 92905, 92908, 92985, 92988, 92995, 92998 Series.
		230985 Shaft—Drive Used on type Nos. 0978, 0993, 0994, 1021, 1022, 1023, 1046, 1047, 1048.	108A	298819	Valve—Choke	209	†260875	Spring—Governor (For 3400 to 3600 RPM Top Speed Set—No Load) Note: 260876 Spring—Governor (For 3900 to 4100 RPM Top Speed Set—No Load) Used on type Nos. 0028, 0050, 0132, 0141, 0166, 0167, 0168, 0173, 0176, 0177, 0178, 0179, 0180, 0181, 0185, 0187, 0200, 0206, 0207, 0209, 0211, 0213, 0216, 0222, 0229, 0235, 0236, 0237, 0238, 0240, 0244, 0246, 0248, 0249, 0263, 0266, 0273, 0277, 0278, 0305, 0306, 0307, 0308, 0311, 0314, 0330, 0334, 0340, 0354, 0356, 0358, 0368, 0373, 0374, 0376, 0385, 0386, 0387, 0391, 0397, 0403, 0407, 0408, 0409, 0429, 0431, 0435, 0437, 0442, 0443, 0528, 0670, 0679, 0691, 0692, 0707, 0738, 0739, 0770, 0780, 0783, 0784, 0785, 0786, 0795, 0803, 0806, 0831, 0851, 0891, 0955, 0966, 0973, 1078, 1115, 1182, 1183, 1217, 1220, 1244, 1287.
		230987 Shaft—Drive Used on type Nos. 1029, 1030, 1031, 1032, 1134, 1168, 1169.	109	68628	Shaft and Lever—Choke			260877 Spring—Governor (For 3200 to 3400 RPM Top Speed Set—No Load) Used on type Nos. 0134, 0136, 0137, 0138, 0142, 0151, 0153, 0154, 0156, 0160, 0165, 0174, 0184, 0192, 0193, 0194, 0195, 0196, 0198, 0199, 0201, 0202, 0203, 0204, 0205, 0208, 0217, 0218, 0219, 0223, 0225, 0253,
83A	230856	Gear—Drive Note: 230906 Gear—Drive Used on type Nos. 0313, 0380, 0384, 0385, 0399, 0414, 0417, 0439, 0565, 0668, 0675, 0701, 0721, 0772, 0802, 0809, 0810, 0835, 0862, 0885, 0940, 0954, 0958, 0959, 0976, 0978, 0982, 0993, 0994, 1009, 1010, 1011, 1021, 1022, 1023, 1038, 1039, 1046, 1047, 1048, 1071, 1102, 1109, 1110, 1118, 1122, 1123, 1127, 1128, 1150, 1153, 1176, 1191, 1192, 1196, 1197, 1198, 1231, 1233, 1234, 1235, 1236, 1237, 1239, 1243, 1270, 1273, 1282.	114	66594	Gasket—Needle Valve Nut			
			116	65978	Packing—Needle Valve			
			117	230590	Nut—Needle Valve			
			118	†23433	Valve—Needle			
			120	92290	Washer—Lock— No. 10 x 1/16 x 3/64"			
			125	390065	Carburetor Assembly Used on type Nos. 0500 and up, except Model 92905, 92985, 92995 Series engines. Note: 390126 Carburetor Assy. Used on all Model 92905, 92985, 92995 Series engines; also used on type Nos. 0575, 0792, 0794, 1210, 1211, 1216, 1236.			
			131	299977	Shaft and Lever—Throttle			
			141	68908	Shaft—Choke			
			147	230591	Seat—Needle Valve			
			148	22235	Washer—Needle Valve (2)			
			149	26336	Spring—Needle Valve			
			151	93524	Screw—Rd. Hd. — 5-40 x 1/2			
			152	260746	Spring—Throttle Adj.			
			163	†270621	Gasket—Air Cleaner Mtg.			
			180	299972	Tank Assembly—Fuel Used on type Nos. 0500 and up.			
			180A	298465	Tank Assembly—Fuel Used on type Nos. 0010 to 0450.			
86	221780	Cover—Sump	181	298425	Cap—Fuel Tank			
87	298041	Seal—Oil	188	93585	Screw—Fuel Tank and Starter Mounting			
88	270328	Gasket—Sump Cover	188A	93444	Screw—Hex. Hd. Sem			
90	298987	Carburetor Assembly Used on type Nos. 0010 to 0450.	190	93440	Screw—Fuel Tank Mtg.			
95	93499	Screw—Throttle Valve Mounting Sem	191	†270253	Gasket and Diaphragm—Fuel Tank			
96	211237	Valve—Throttle	200	68388	Blade—Governor			
97	298821	Shaft and Lever—Throttle						

† Included in Engine Repair Kit—
Part No. 390132.

92900 to 92999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		0254, 0255, 0256, 0257, 0261, 0262, 0265, 0272, 0279, 0280, 0286, 0290, 0295, 0297, 0300, 0301, 0302, 0327, 0328, 0337, 0338, 0342, 0343, 0344, 0345, 0355, 0377, 0378, 0380, 0382, 0384, 0389, 0390, 0393, 0394, 0395, 0400, 0401, 0404, 0412, 0413, 0414, 0418, 0419, 0421, 0423, 0433, 0438, 0441, 0444, 0526, 0533, 0575, 0680, 0681, 0685, 0687, 0689, 0699, 0700, 0701, 0702, 0703, 0705, 0706, 0708, 0711, 0712, 0713, 0714, 0716, 0720, 0723, 0724, 0727, 0728, 0729, 0730, 0733, 0734, 0735, 0736, 0737, 0741, 0742, 0743, 0744, 0746, 0747, 0749, 0750, 0752, 0755, 0761, 0762, 0763, 0771, 0776, 0778, 0791, 0792, 0793, 0794, 0796, 0797, 0801, 0802, 0805, 0807, 0809, 0810, 0819, 0820, 0821, 0822, 0829, 0834, 0835, 0841, 0842, 0843, 0844, 0866, 0872, 0873, 0875, 0876, 0879, 0880, 0882, 0884, 0888, 0889, 0894, 0895, 0896, 0897, 0902, 0907, 0908, 0909, 0913, 0919, 0922, 0924, 0926, 0928, 0930, 0939, 0940, 0941, 0944, 0946, 0947, 0950, 0952, 0958, 0959, 0963, 0965, 0969, 0977, 0978, 0981, 0992, 0993, 0994, 1003, 1007, 1008, 1028, 1029, 1030, 1031, 1032, 1051, 1063, 1065, 1072, 1088, 1099, 1100, 1106, 1118, 1119, 1120, 1121, 1125, 1129, 1130, 1133, 1138, 1140, 1143,			1156, 1157, 1158, 1161, 1162, 1185, 1186, 1194, 1206, 1208, 1210, 1211, 1216, 1222, 1223, 1224, 1249, 1256, 1259, 1260, 1264, 1266, 1267, 1269, 1273, 1278, 1285, 1289. 261034 Spring—Governor (For 2900 to 3100 RPM Top Speed Set—No Load) Used on type Nos. 0694, 0695, 0696, 0697, 0698, 0745, 0756, 0762, 0767, 0768, 0777, 0824, 0838, 0847, 0852, 0856, 0857, 0858, 0859, 0862, 0874, 0878, 0890, 0905, 0906, 0910, 0916, 0917, 0923, 0937, 0970, 0976, 0987, 0988, 0997, 0998, 0999, 1000, 1001, 1004, 1005, 1010, 1011, 1014, 1015, 1016, 1017, 1020, 1021, 1022, 1023, 1024, 1025, 1026, 1027, 1053, 1066, 1070, 1073, 1074, 1075, 1077, 1079, 1085, 1086, 1094, 1095, 1096, 1098, 1103, 1104, 1139, 1175, 1177, 1180, 1181, 1184, 1187, 1190, 1201, 1205, 1207, 1229, 1241, 1243, 1245, 1248, 1253, 1261, 1262, 1263, 1268, 1271, 1276, 1277. 261060 Spring—Governor (For 3100 to 3300 RPM Top Speed Set—No Load) Used on type Nos. 0515, 0516, 0517, 0519, 0521, 0523, 0524, 0529, 0530, 0534, 0542, 0543, 0544, 0550, 0560, 0565, 0571, 0572, 0573, 0574, 0677, 0693, 0774, 0775, 0781, 0787, 0788, 0789, 0800, 0804, 0813, 0814, 0815, 0816, 0817, 0828, 0830, 0837, 0890, 0935, 0936, 0938,			0957, 0980, 0995, 0996, 1013, 1029, 1030, 1031, 1032, 1041, 1061, 1067, 1068, 1081, 1113, 1116, 1117, 1134, 1151, 1152, 1168, 1169, 1199, 1215, 1221, 1226, 1227, 1228, 1274, 1283, 1288. 261061 Spring—Governor (For 3600 to 3800 RPM Top Speed Set—No Load) Used on type Nos. 0718, 1097, 1148, 1149, 1254. 261105 Spring—Governor (For 3000 to 3200 RPM) Used on type Nos. 0673, 0674, 0675, 0676, 0684, 0709, 0710, 0719, 0721, 0725, 0726, 0748, 0773, 0790, 0798, 0799, 0808, 0830, 0836, 0845, 0846, 0848, 0849, 0872, 0873, 0879, 0885, 0900, 0931, 0932, 0975, 0985, 0986, 1009, 1018, 1019, 1033, 1034, 1035, 1036, 1037, 1038, 1039, 1040, 1050, 1057, 1058, 1059, 1069, 1071, 1076, 1080, 1082, 1083, 1084, 1090, 1091, 1092, 1093, 1101, 1105, 1109, 1110, 1111, 1112, 1122, 1123, 1126, 1127, 1128, 1131, 1132, 1137, 1141, 1142, 1144, 1145, 1146, 1150, 1153, 1154, 1159, 1160, 1166, 1167, 1170, 1171, 1172, 1173, 1174, 1176, 1178, 1188, 1189, 1191, 1192, 1193, 1197, 1198, 1200, 1204, 1214, 1230, 1238, 1250, 1251, 1252, 1255, 1258, 1265, 1270, 1275, 1284, 1286. 261106 Spring—Governor (For 2800 to 3000 RPM) Used on type Nos. 1042, 1043, 1044, 1045, 1046, 1047, 1048, 1056, 1062,

92900 to 92999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		1114, 1179, 1212, 1213, 1235, 1236, 1237, 1272, 1279, 1280, 1281.			1122, 1123, 1127, 1128, 1134, 1137, 1141, 1142, 1143, 1153, 1163, 1167, 1170, 1172, 1173, 1174, 1176, 1188, 1189, 1200, 1203, 1204, 1207, 1210, 1211, 1216, 1238, 1250, 1251, 1254, 1256, 1263, 1266, 1267, 1273, 1275, 1284, 1285, 1286.			0760, 0762, 0764, 0769, 0770, 0772, 0778, 0783, 0784, 0786, 0795, 0811, 0813, 0822, 0826, 0842, 0855, 0856, 0871, 0875, 0878, 0883, 0889, 0899, 0903, 0914, 0916, 0917, 0918, 0919, 0920, 0922, 0930, 0933, 0937, 0938, 0943, 0945, 0948, 0949, 0951, 0953, 0970, 0973, 0979, 0980, 0981, 0988, 0997, 1005, 0172, 1115, 1125, 1175, 1207, 1225, 1244, 1246, 1254, 1255, 1272, 1285.
265	22372	Clamp—Casing			391025 Muffler—Exhaust Used on type Nos. 1258, 1259, 1260, 1264, 1289.			298570 Housing—Blower (For Wind-up Starter) Used on Model 92906, 92996 Series.
267	93469	Screw—Clamp Mounting	303	91943	Elbow—Exhaust			298602 Housing—Blower (For Rewind Starter) Used on type Nos. 0164, 0173, 0186, 0217, 0248, 0270, 0286, 0293, 0322, 0356, 0388, 0671, 0677, 0678, 0707, 0714, 0894, 0915, 0929, 0967, 0976, 1055, 1102, 1209, 1231, 1233, 1262, 1282.
268	66986	Casing—Control Wire— 48" long Note: If longer casing is needed, specify length in inches; if a shorter casing is needed order No. 66986 and cut to required length.	304	298599	Housing—Blower (For Rewind Starter) Note: 298467 Housing—Blower (For Rope Starter) Used on type Nos. 0229, 0265, 0351, 0419, 0771, 0928, 1099.			298604 Housing—Blower (For Rewind Starter) Used on type Nos. 0021, 0024, 0050, 0139, 0159, 0162, 0170, 0172, 0176, 0178, 0179, 0180, 0195, 0197, 0200, 0202, 0226, 0232, 0233, 0247, 0249, 0260, 0282, 0285, 0294, 0309, 0313, 0318, 0321, 0332, 0344, 0346, 0352, 0368, 0376, 0377, 0380, 0385, 0386, 0398, 0399, 0400, 0401, 0404, 0409, 0415, 0416, 0417, 0420, 0445, 0521, 0524, 0550, 0673, 0675, 0676, 0686, 0690, 0700, 0709, 0717, 0718, 0725, 0738, 0739, 0740, 0741,
269	26099	Wire Control, 54" long Note: If longer wire is needed, specify length in inches; if shorter wire is needed, order No. 26099 and cut to required length.			298568 Housing—Blower (For Rewind Starter) Used on type Nos. 0040, 0044, 0144, 0152, 0153, 0156, 0157, 0158, 0163, 0165, 0166, 0174, 0182, 0185, 0187, 0193, 0203, 0204, 0205, 0206, 0207, 0210, 0212, 0220, 0225, 0227, 0241, 0244, 0245, 0246, 0254, 0256, 0257, 0258, 0263, 0266, 0268, 0274, 0275, 0277, 0287, 0289, 0295, 0296, 0300, 0301, 0302, 0303, 0304, 0306, 0308, 0311, 0312, 0315, 0330, 0331, 0333, 0334, 0340, 0342, 0343, 0348, 0350, 0355, 0357, 0358, 0360, 0361, 0362, 0365, 0370, 0375, 0382, 0384, 0391, 0395, 0397, 0405, 0407, 0410, 0411, 0421, 0424, 0426, 0427, 0428, 0432, 0436, 0438, 0439, 0442, 0446, 0540, 0544, 0670, 0687, 0688, 0689, 0704, 0711, 0713, 0731, 0732, 0757, 0758,			
270	63426	Locknut—Control Wire Casing						
271	290568	Lever Assembly Control						
298	220859	Locknut—Muffler						
299	294441	Muffler—Exhaust						
300	298830	Muffler Exhaust Note: 29807 Muffler—Exhaust Used on type Nos. 0419, 0928. 299106 Muffler—Exhaust Used on type Nos. 0050, 0060, 0176, 0177, 0179, 0216, 0228, 0233, 0243, 0313, 0320, 0321, 0326, 0344, 0345, 0352, 0353, 0354, 0368, 0375, 0385, 0386, 0398, 0399, 0403, 0404, 0409, 0415, 0417, 0418, 0429, 0436, 0438, 0526, 0550, 0560, 0565, 0575, 0675, 0676, 0711, 0712, 0713, 0717, 0718, 0719, 0721, 0734, 0741, 0742, 0748, 0792, 0793, 0794, 0799, 0805, 0807, 0808, 0820, 0862, 0879, 0885, 0895, 0896, 0900, 0903, 0924, 0985, 0986, 1050, 1051, 1071, 1098, 1099, 1100, 1109, 1110, 1111, 1112,						

92900 to 92999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		0752, 0754, 0755, 0773, 0801, 0802, 0806, 0823, 0845, 0857, 0865, 0885, 0886, 0887, 0913, 0931, 0939, 0940, 0975, 0978, 0986, 0989, 0991, 1006, 1009, 1017, 1018, 1020, 1021, 1025, 1026, 1041, 1043, 1046, 1050, 1051, 1057, 1065, 1070, 1073, 1082, 1085, 1105, 1113, 1116, 1117, 1119, 1120, 1122, 1142, 1145, 1150, 1163, 1173, 1176, 1178, 1188, 1199, 1203, 1206, 1212, 1226, 1229, 1230, 1234, 1235, 1238, 1241, 1245, 1251, 1256, 1267, 1271, 1273, 1274, 1276, 1277, 1279, 1284, 1286, 1288, 1291.			Used on type Nos. 0143, 0160, 0161, 0208, 0237, 0238, 0284, 0354, 0403, 0429, 0444, 0716, 0756, 0805, 0807, 0957, 0965, 1042, 1052, 1180, 1201, 1227.			0738, 0739, 0759, 0904, 0942, 0951, 1209.
		299983 Housing—Blower (For Vertical-Pull and Electric Starter)				340	26018	Spring—Breaker Arm
		Used on Model 92905, 92908, 92985, 92988, 92995, 92998 Series.				341	93381	Screw—Breaker Arm Mounting Sem
			305	93559	Screw—Blower Housing Mounting Sem	342	†65704	Plunger—Breaker Point
			306	221805	Shield—Cylinder	344	93042	Screw—Condenser Clamp Mounting Sem
			307	93490	Screw—Cylinder Shield and Rotating Screen Mounting Sem	345	220366	Cover—Breaker Point and Condenser
			309	390073	Motor—Starter	346	93014	Screw—Dust Cover Mounting
			310	93609	Bolt—Starter Motor	356	298479	Wire—Ground
			311	390204	Brush—Starter Motor		Note:	298581 Wire—Ground
			324	222063	Screen—Rotating			Used on Type Nos. 0387, 0437, 0441, 0702, 0703.
			325	298731	Starter Pulley with Screen	358	298989	Gasket Set
			329	93294	Screw—Sem	363	19069	Puller—Flywheel (Optional Accessory)
				Note:	93415 Screw—Sem	372	220477	Clamp—Condenser
					62199 Washer	374	92813	Washer—Lock— Shakeproof
					Used to mount Starting Motor to Bracket on type No. 0737.	375	†294628	Breaker Points and Condenser Set
			330	294584	Rope—Starter		Note:	299061 Ignition Kit
			331	220865	Washer—Flywheel			Includes: 294628 Point Set
			332	92284	Nut—Flywheel			†65704 Plunger
			333	298502	Armature—Magneto			†61760 Key— Flywheel
			334	93381	Screw—Armature Mtg. Sem	377	93065	Key—Woodruff No. 505
			335	93435	Screw—Armature and Governor Blade Mtg. Sem	382	93545	Screw—Choke Link Cover
			337	298809	Plug—Spark (with gasket) 1-1/2" high—(38 mm.)	390	261015	Spring—Diaphragm
				Note:	Spark Plugs 298809, 29693, and 293918 Use Ignition Cable Terminal No. 221798.	392	260455	Spring—Fuel Pump Diaphragm
					29693 Plug—Spark (with Gasket) 2" high—51 mm.	394	299636	Diaphragm—Carburetor
					293918 Plug—Spark	396	270571	Gasket—Choke Link Cover
					Used on type Nos. 0028, 0186, 0200, 0249, 0274, 0276, 0315, 0350, 0528,	397	211678	Cover—Choke Link
						409	299839	Control—Dial
						410	260993	Link—Control
						423	93599	Screw—Sem
						432	221377	Cap—Spring
						455	297542	Cup, Spring and Release Assembly
						458	298431	Handle Assy.—Cranking
						459	221332	Pawl—Ratchet
						460	93272	Retainer—Ratchet Pawl
						461	93298	Screw—Handle Mounting
						462	221237	Washer—Handle Mounting
						467	299858	Knob—Dial Control

† Included in Engine Repair Kit—
Part No. 390132.

92900 to 92999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
508	93158	Screw—Sem	536A	298566	Cleaner Assembly—Air Used on type Nos. 0010 to 0450.			Note: 390200 Carburetor Control Plate and Harness Plug Bracket Used on type Nos. 0654, 0664, 0839, 0841, 1164.		
513	390074	Clutch Assembly— Electric Starter	544	390206	Armature—Starter	620B	298823	Plate Assembly— Carburetor Control Used on type Nos. 0010 to 0450.		
515	260537	Spring—Ratchet Pawl	548	390208	Washer Set—Starter Motor			Note: 298837 Plate Assy. — Carburetor Control Used on type Nos. 0015, 0016, 0017, 0018, 0019, 0020, 0021, 0022, 0023, 0024, 0028, 0029, 0030, 0031, 0032, 0033, 0034, 0040, 0041, 0042, 0043, 0044, 0050, 0060, 0139, 0156, 0158, 0169, 0174, 0185, 0194, 0195, 0200, 0206, 0207, 0213, 0217, 0223, 0247, 0249, 0258, 0263, 0265, 0273, 0275, 0279, 0280, 0282, 0283, 0285, 0286, 0294, 0295, 0297, 0299, 0302, 0303, 0309, 0331, 0338, 0339, 0342, 0343, 0355, 0357, 0358, 0359, 0370, 0379, 0416, 0419, 0422, 0440.		
516	260374	Spring—Connector	592	90356	Nut—Hex. —10-24			298652 Control Assy. — Dial Uses: 93475 Screw— Sem (Mounting Control to Blower Housing) Includes: 93461 Screw— Swivel 230821 Pin— Swivel 260846 Link— Control 260867 Washer— Swivel Pin Used on type Nos. 0189, 0190, 0221, 0259, 0260, 0332, 0344, 0345, 0346, 0347, 0352, 0353, 0418.		
517	390042	Starter Pulley with Screen Note: 222063 Screen Uses: 93490 Screw— Screen Mtg. Used on type Nos. 0737, 1044, 1107, 1108, 1143, 1211, 1236, 1289.	608	298466	Starter Assy. —Rewind Note: For 110 Volt Electric Starter Conversion Kit Order No. 295330.	621	297472	Switch—Stop		
523	299978	Cap with Dipstick—Oil Filler For complete Oil Fill Cap with Dipstick and Oil Filler Tube Assy.—order Part 299988.	611	†297219	Pipe—Fuel (long)	625	298775	Tube—Fuel Intake		
523A	298664	Cap & Dipstick— Oil Filler For complete Oil Fill Cap with Dipstick and Oil Filler Tube Assy.—order Part 298684.	612	†296811	Pipe—Fuel (short)					
524	270306	Seal (Between Tube and Sump)	617	†270344	Seal—Fuel Intake Tube					
525	299987	Tube—Oil Filler	618	260870	Spring—Choke Return					
525A	298663	Tube—Oil Filler	620	299974	Plate—Carburetor Control Used on type Nos. 0500 and up, except those with Electric Starters. Note: 299975 Plate—Carburetor Control Used on type Nos. 0515, 0516, 0517, 0519, 0521, 0523, 0524, 0526, 0528, 0529, 0530, 0532, 0533, 0534, 0540, 0542, 0543, 0544, 0550, 0560, 0565, 0571, 0572, 0573, 0574, 0575, 0652, 0655, 0656, 0657, 0660, 0661, 0662, 0665, 0666, 0682, 0686, 0689, 0723, 0738, 0739, 0740, 0770, 0771, 0778, 0779, 0783, 0784, 0792, 0850, 0894, 0902, 0916, 0921, 0928, 0948, 0952, 0964, 0981, 0987, 1061, 1063, 1078, 1114, 1134, 1135, 1165, 1167, 1172, 1173, 1184, 1199, 1203, 1208, 1216, 1221, 1226, 1230, 1232, 1246, 1256, 1257, 1261, 1278, 1283.					
529	67838	Grommet—Breather								
534	93374	Screw—Air Cleaner Note: 230741 Stud 92067 Nut—Wing Used on type No. 0855.	620A	390199	Carburetor Control Plate and Harness Plug Bracket Used on type Nos. 0500 and up with Electric Starters, except type Nos. 0737, 1108, 1289 which use Plate No. 299974.					
535	270579	Element—Air Cleaner Used on type Nos. 0500 and up. Note: 270209 Element—Air Cleaner Uses: 221969 Support 280015 Cup Used on type No. 0855.								
535A	270251	Element—Air Cleaner Used on type Nos. 0010 to 0450.								
536	390055	Cleaner Assembly—Air Used on type Nos. 0500 and up. Note: 299593 Cleaner Assy. — Air Used on type No. 0855.								

† Included in Engine Repair Kit—
Part No. 390132.

† Included in Engine Repair Kit—
Part No. 390132.

92900 to 92999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
634	270167	Washer—Throttle Shaft (Felt)	766	280022	Pulley—Rope (Small)			(55" long with 32" long side Lead Wire—for Switch on Handle)
635	66538	Elbow—Spark Plug	767	93586	Pin—Small Rope Pulley			Note: 390372 Wiring Harness Assy.—Mower
646	222086	Bracket—Electric Starter Mounting	768	299948	Pulley and Gear Assembly—Starter			(12" long with 8" long side Lead Wire—for Switch on Deck)
655	222057	Anchor—Spring	769	66734	Rope—Vertical Pull Starter	790	390123	Battery—Electric Starter
665	296768	Oil Minder	771	299961	Clip—Vertical Pull Starter			Note: If this Battery does not fit, refer to Equipment Manufacturer.
666	299992	Gauge—Fuel Level (Used only on type Nos. 0500 and up).	772	93598	Screw—Sem	791	390197	Charger—Battery
666A	297073	Gauge—Fuel Level (Used only on type Nos. 0110 to 0450)	773	390112	Retainer Assy.—Spur Gear	792	390137	Bracket Assembly—Battery Mounting
670	211740	Spacer—Fuel Tank	774	280035	Insert—Starter Handle	793	261049	Clip—Wiring Harness
670A	211412	Spacer—Fuel Tank	775	280036	Grip—Starter Rope	795	390122	Switch Assembly—Starter—Ignition
673	93438	Screw—Receptacle Retainer	776	222049	Guide—Rope			Note: 390128 Switch Assy.—Starter—Ignition (Less Housing)
674	93447	Screw—Tank to Bracket	777	390066	Spring—Vertical Pull Starter			Used on type Nos. 0698, 0750, 0751, 0798, 0799, 0830, 0835, 0840, 0841, 0880, 0890, 0895, 0896, 0993, 1019, 1022, 1031, 1044, 1047, 1086, 1100, 1236.
675	93408	Washer—Starter Spring Housing Spring	778	280021	Cover—Vertical Pull Starter Pulley	797	390201	Nut Set
676	221794	Deflector—Muffler	781	280034	Cap—Electric Starter Pulley	798	590316	Key Set—Starter Switch
	Note:	221861 Deflector—Muffler Used on type Nos. 0975, 1036, 1105, 1127, 1128, 1150, 1154, 1176, 1191, 1192, 1193, 1214.	782	280038	Gear—Electric Starter Spur	799	211773	Housing—Starter Switch
677	93606	Screw—Muffler Deflector and Harness Retainer	783	230960	Gear—Electric Starter Pinion	800	222212	Retainer—Switch Receptacle
679	270382	Washer—Choke Shaft (Felt)	784	222085	Cover—Electric Starter Clutch Gear	801	390202	Motor Output End Cover and Mounting Bracket
680	221839	Washer—Choke Shaft	785	270610	Gasket—Electric Starter Clutch Gear Cover	802	390203	Cap—End
681	299060	Needle Valve Kit	786	390102	Wiring Harness—Starter Motor (Cylinder Head end)	803	390205	Shell to Housing
720	93474	Pin—Gear to Shaft		Note:	390129 Wiring Harness—Starter Motor	820	390132	Engine Repair Kit
721	221779	Stop—Drive Shaft			Uses: 222091 Bracket—Harness Plug	822	297518	Starter Assy.—Windup
727	211757	Cover—Electric Starter			Used on type Nos. 0737, 1108, 1289.			
764	299946	Starter Assembly—Vertical Pull			390192 Wiring Harness—Starter Motor			
765	299947	Housing—Vertical Pull Starter			Used on type No. 0796.			
			787	222088	Retainer—Harness Plug			
			789	390207	Wiring Harness Assy.—Mower			

